


Marantz CDR 510 CD Recorder Quick Operating Instructions

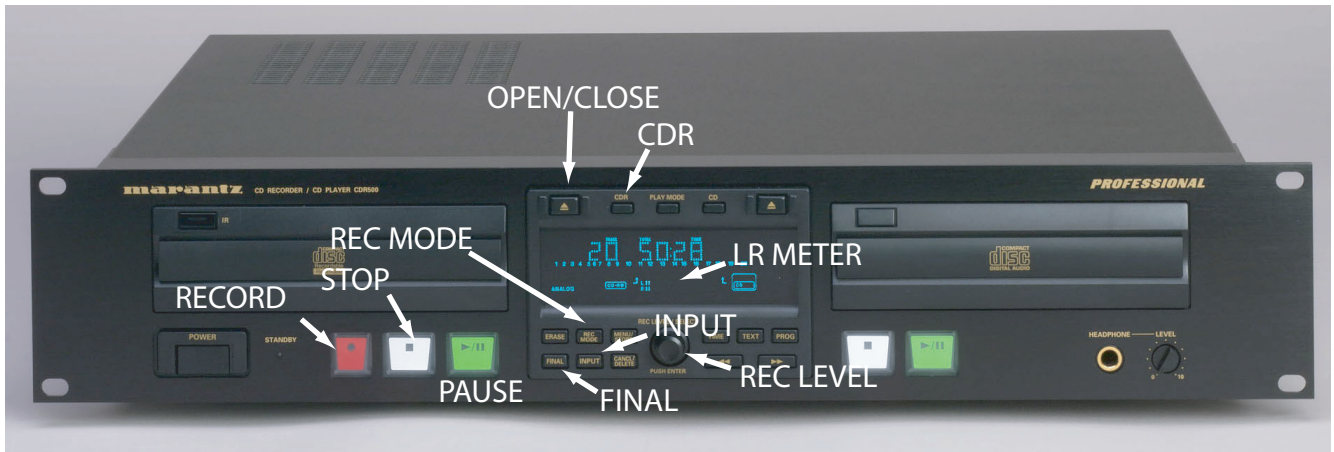

TO RECORD A CD LIVE:

- 1) Press the POWER button to turn on the CD recorder.
 - 2) Once it has initialized it should display "ANALOG" in the bottom left corner of the display. If it doesn't, press and release the INPUT button until it does.
 - 3) Press the OPEN/CLOSE button on the LEFT side drive to open the drawer.
 - 4) Press the CDR button to set the display to CDR.
 - 5) Insert a blank CD in the drawer and press the OPEN/CLOSE button again to close the drawer.
 - 6) Press the REC MODE button 6 times until the display says "REC EXT MAN" which stands for Record External Manual.
 - 7) Adjust the REC LEVEL dial while someone speaks into the microphone until you see a good recording level on the L/R METER (just below the red).
- NOTE: Steps 2, 6 & 7 only need to be done the first time, or if someone changes the settings. The unit remembers this information.
- 7) When you are ready to start recording, press the Red RECORD button.
 - 8) If you want to pause the recording, press the Green PAUSE button, then press RECORD to start.
 - 9) When you are finished recording, press the White STOP button.
 - 10) Once you have finished recording as much as you want on this CD, you need to Finalize it by pressing the FINAL button immediately followed by pressing the RECORD button. A timer will count down as the process takes place.
 - 10) Now you can press the OPEN/CLOSE button and remove the CD.

TO PLAY A CD:

- 1) Open the RIGHT CD drive and insert a CD for playback.
- 2) Press the Green PLAY button on the Right side to play it.

For all other operations such as copying CDs, please refer to the Marantz CDR510 User Guide